

(SeTracker) Quick Start Guide

Please kindly read this manual carefully before starting to use the watch, pictures only for reference.

1. Prepare before using

Please check the watch model and the accessories.

Choose a SIM card which supports 2G GSM network, please ask local telecom operator for advice.

Please shutdown the watch before installing the SIM card.

The SIM card must have 2G GPRS data and caller ID function.

Install APP to the phone, you can ask the agency for more APP details.

Scan the QR code at the end of this manual to download the APP.

Scan or input the REG CODE to register the watch on APP.


2. Product Function

- GPS+AGPS+LBS+WIFI positioning
- GPRS real-time positioning, tracking, monitoring
- Phone book
- Talk
- Health
- Step
- Alarm clock
- Safe area/Geo-fence
- SOS
- Heart rate detection
- Low power alert
- Remote shutdown
- Sports reminder
- Sedentary reminder
- Take medicine reminder

3. Watch Introduction



4. Screen display and instruction

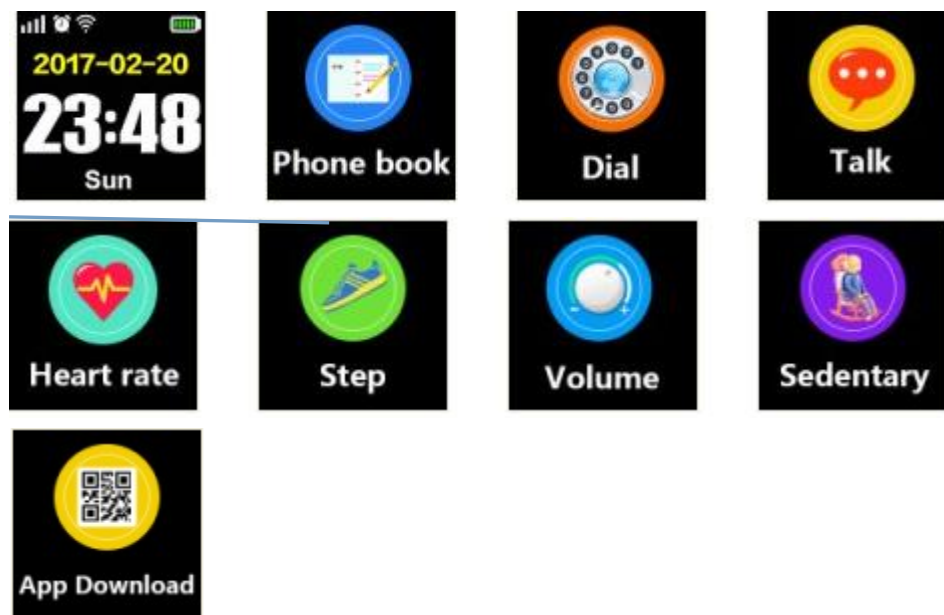

4.1 Main screen display: the first line icon means GSM signal, Ring mode(not show in the picture), Voice(did not show in the picture), Location, network, battery, date, time, week.

4.2 Phone book: click this icon to see 30 phone numbers in the APP, slide left or right to select the number to dial.

4.3 Dial: can input the number to dial

4.4 Talk: between APP and the watch, in the record interface, long press to record, then loosen to send.

4.5 Heart Rate: wear the watch, click to test, the normal test time is 30 seconds.

4.6 Step: default off. You can open pedometer in the APP. If opened, the watch will record the steps automatically, then click the interface to see the step numbers.

4.7 Volume: Adjust the watch volume.

4.8 Sedentary: If sit for long time, the watch can be set to remind the user to stand up to do some exercise.


4.9 APP Download: Scan the QR code to download APP. Click into checking the REG CODE under the QR code.

5. APP (SeTracker) Instruction

5.1 APP Register

Scan the QR code or input the REG CODE manually to register account. The REGCODE is only valid for one account.

The register interface is as below:

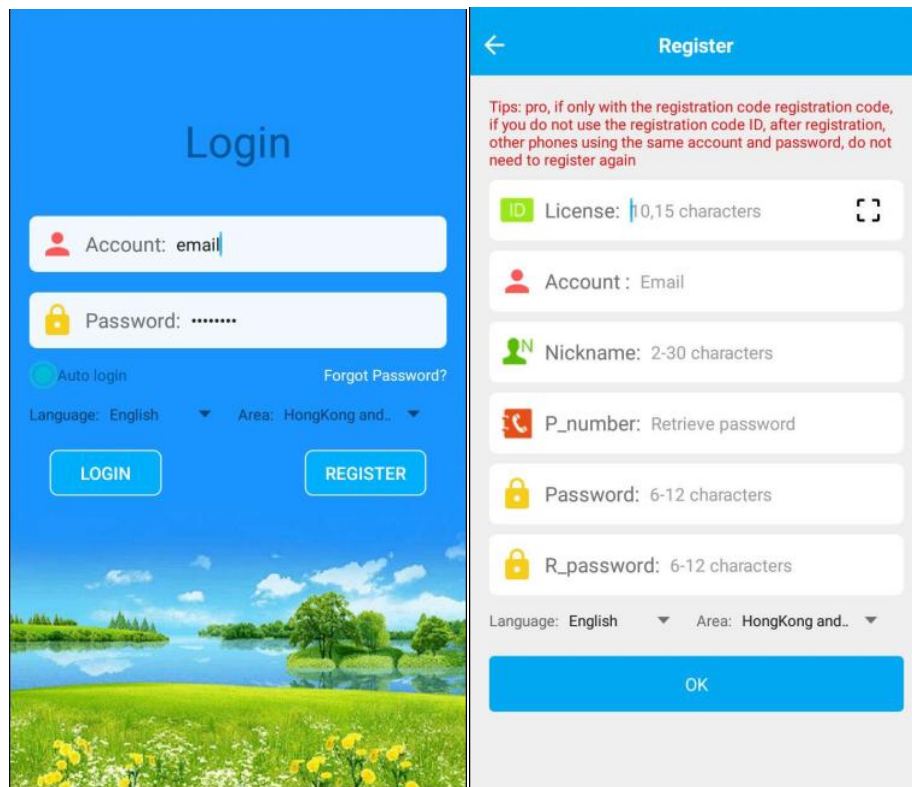


FAQ:

1. If REG CODE shows error, please try to input the ID No. or IMEI No.
2. If REG CODE used, it need to be reset, and then register again.
3. If the account already registered, please try another account.
4. Retrieve password: get back the password by REG CODE and the account, or by register email or the email in personal data.

5.2 Login

5.2.1 APP Function Manual

After registered, login to the main manual as below:

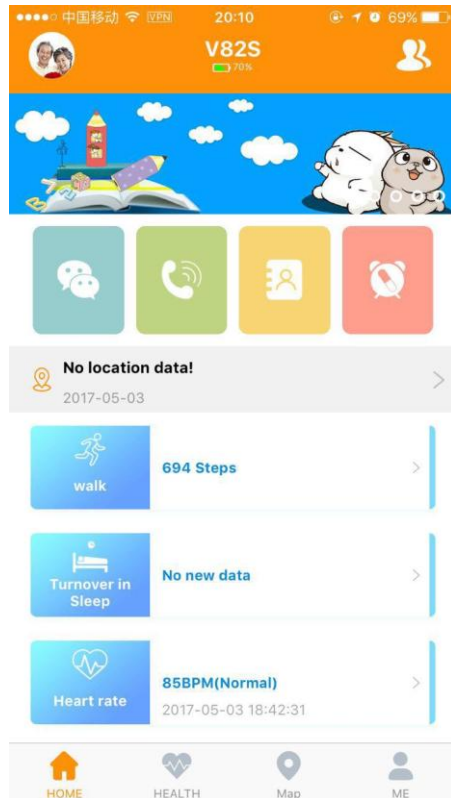

Partial Functions:

(1) Chat: Voice can be sent between the Watch and APP.

App send voice: Voice starts recording, and APP will send to the watch, the longest voice message could last for 15 seconds. When message sent to watch, it would get notification in watch, and click for play.




(2)Call: Click into the call interface.

(3)Phone book: can set 30 phone numbers.


(4)Take medicine reminder: can set words or voice remind in different time. (Please touch the watch to stop the notification)

(5)Health: see the steps, turn over and heart rate data.

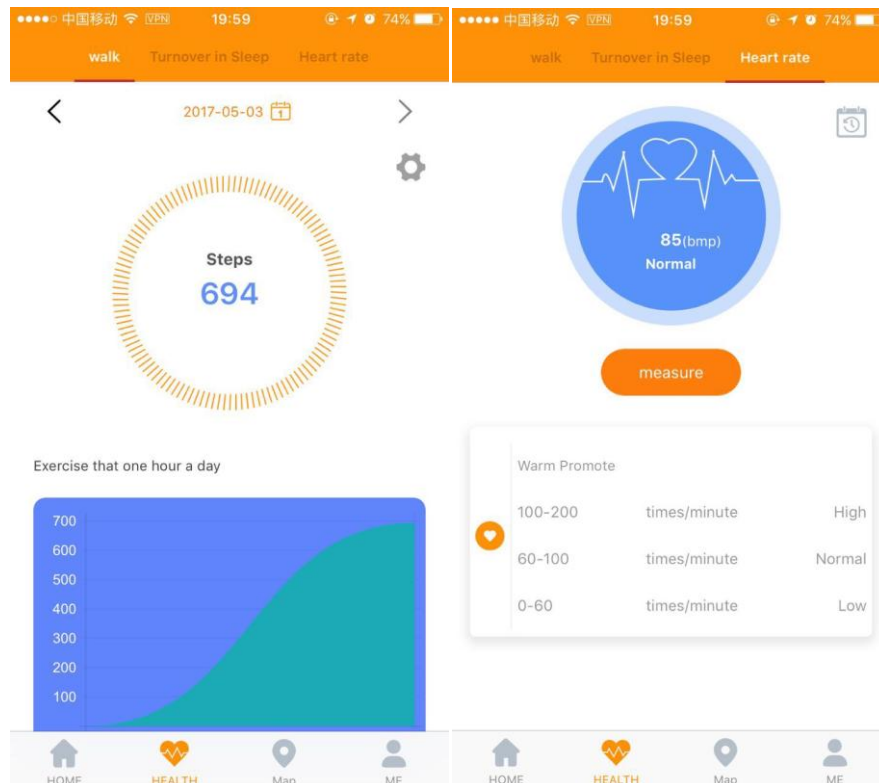

(6) Locate: View the Watch real-time location.


The watch and APP mobile phone location can be shown on the map. Click 'Locate' to start locating for 3 minutes, the upload interval is 20 seconds, 3 minutes later back to the default mode. On the map you can know the watch locate method, the RED locate icon means GPS, blue means LBS, green means WIFI.

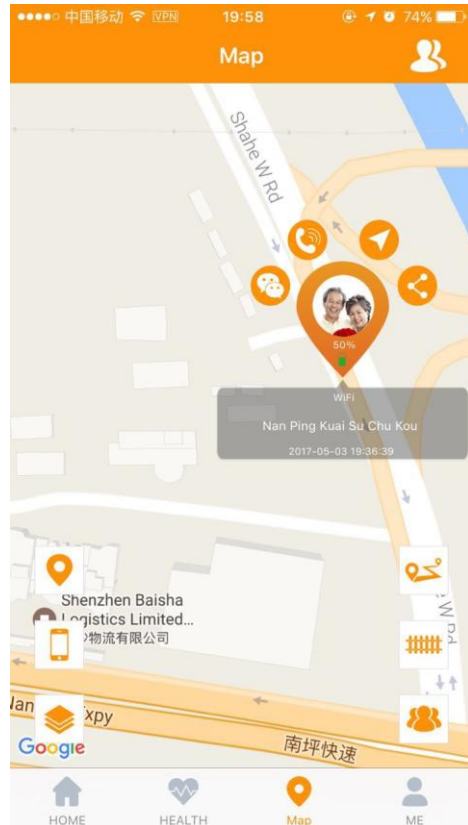


In the map interface you can Talk, Call, Trace and so on.

(7) Trace: Can view the trace by time interval. In this interface, LBS turn on indicate the base station place, LBS off means do not indicate.

(8) GEOFENCE: It can only set 1 fence and the fence radius can be 200-2000m, it will send alert SMS to APP when the watch go outside the fence.

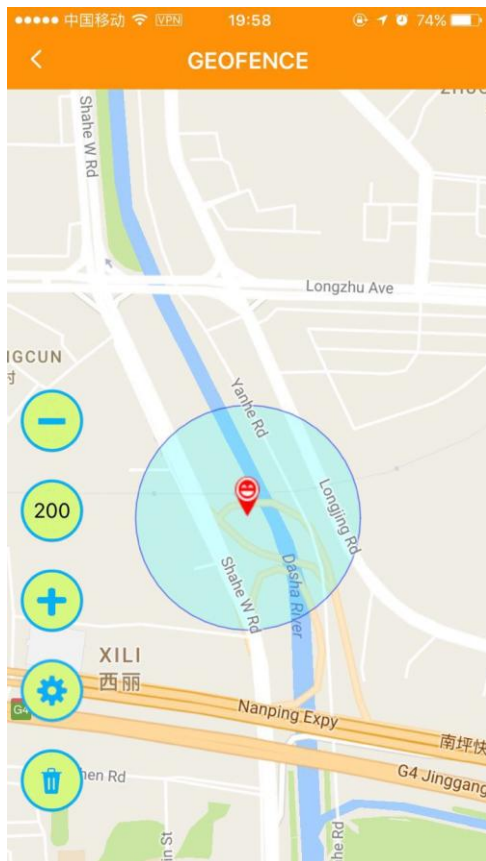

(9) ME: Set all parameters of the watch.

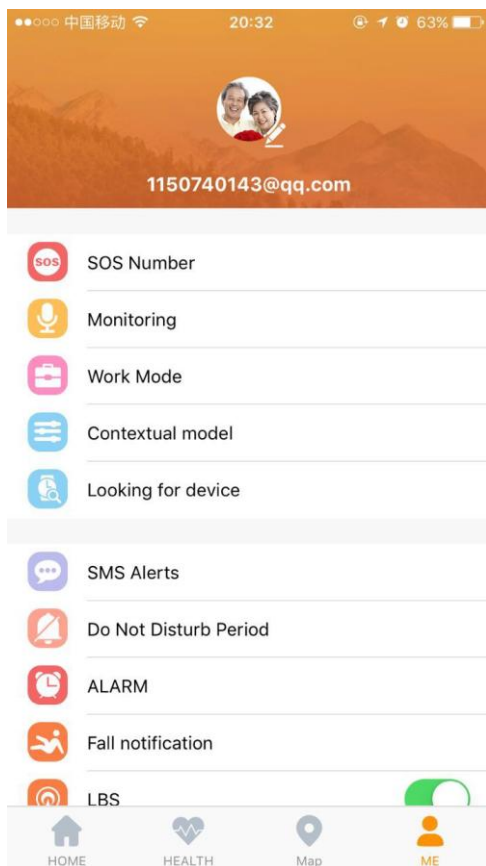

- ① SOS Number: 3 numbers can be set. Press SOS key 3 seconds when in emergency, the watch will dial the 3 numbers in turn automatically, loop 2 rounds to end, if no answer, it will send SOS alert to APP.
- ② Monitoring: Usually set the guardian's number as monitor number. When monitoring on, the watch will dial the guardian's number automatically, the mobile phone can hear the sound around the watch, but the watch can not hear the mobile phone.
- ③ Work Mode: 3 work modes of Normal Mode, Power Save Mode, Follow Mode. Different work mode has different upload interval time.
Normal Mode: upload interval time 10 minutes
Power Save Mode: upload interval time 1hour
Follow: upload interval time 1 minute
- ④ Contextual Model: Vibration and Rang the bell, Ring-down, Vibration mode, silent mode.
- ⑤ Looking for device: Click it, the watch will ring for 1 minute so that you can find it. Press any key to stop it.
- ⑥SMS Alerts: 3 situations can be set , which are low power, SOS and taking off watch. The setting phone number will receive the alarm SMS from the watch, and the phone number will also set as the default number in Monitoring.
- ⑦Do not disturb period: In the 3 periods, the watch will shield any call.
- ⑧Alarm: 3 alarm clocks are available and you can set the alarm clock as you like.
- ⑨ Fall notification: There are two notification, you could choose to activate anyone you like or both of them. Fall notification (receive SMS on App), fall notification and call (receive SMS on App and get a phone call with center number) when people fall down. Notice: if it is activated by accidente, user could cancel the notification on watch before it sent out.
- ⑩ LBS: Open means your history trace will show in LBS location.
- ⑪ Language and Time Zone: Can choose where you belong to.
- ⑫Shutdown the Device: It can not shut down by pressing power button on watch after the watch starts to work, you can power off on app remotely.
Message: Click into view the watch alert message record
Remarks: In device list can view the registered ID number, if this ID number is not the same as the number pasted on the watch, the watch can not connect to the app.
- ⑬Device list: Can switch to different device ID.
- ⑭Change password
- ⑮MESSAGE

6. Watch Instruction

6.1 Watch SOS

Long press SOS key for 3seconds, it will dial the 3 SOS numbers one by one for two turns if nobody answer the call, then send alert message to monitoring number (default "off") and APP at the same time.

6.2 Heart rate

With Photoelectric switch, when click into heart rate interface, the function will automatically test the heart rate for 30s. If the watch is not worn in right way, it will warn to wear the watch properly and test again.

6.3 Low power alert

The watch battery appear in percentage. When it is under 20%, the watch will send alert message to the monitoring number (default “off”) and APP at the same time.

6.4 Talk

Click into the Talk interface, it can communicate with APP by voice message.

6.5 Shutdown

Press Power key to shutdown without SIM card inside, or shutdown on APP remotely when with SIM card inside.

6.6 Phone Book

It can set 30 phone numbers in App, slide to the phone book, the user can choose the number and short press to dial. The phone numbers in the app can call the watch, and the watch also can call these numbers.

6.7 Dial

The watch can input any phone numbers to dial from the dial interface.

6.8 Sedentary

Open or close by hand. When the watch not detect vibration during the setting period, it will alarm for reminding the old man to sport.

7. Clearing of fault

If the watch first time operating cannot connect to the server, it is offline in the APP.

Please check:

- 1) Please confirm the SIM card support GSM network.
- 2) Please confirm the SIM card with GPRS function. It must be 2G GSM network.
- 3) Please confirm your ID No. is correct. You can send SMS“**pw,123456,ts#**” by phone to the SIM card in watch to check the ID(the watch must be power on with SIM card).
- 4) There are two cases for register failed: a. the ID not exist or the ID already registered, please ask the agent for help. b. account already registered, change another account to register.

8 QR Code

Scan to download Android or IOS APP (Remarks: Please download ‘SeTracker’ not ‘SeTracker2’)

